


Please Make sure you have download below docs before you start:

1. AT02 online document support:


🌐 <https://en.totemtek.com/support/documents/gps-tracker-at02/>
--- User manual, configurator, configuration manual.

2. AT02 online video reference:


🌐 <https://en.totemtek.com/category/blog/video/>

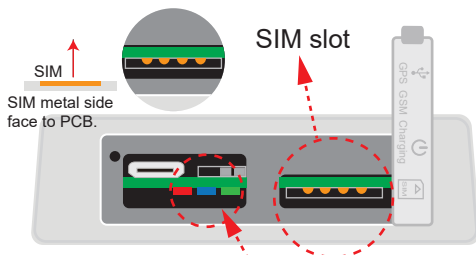

- 1** Put SIM inside
- LEDs { Red: PWR
Green: GSM
Blue: GPS

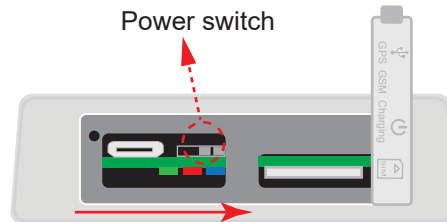

- 2** switch on device.
switch to right side.

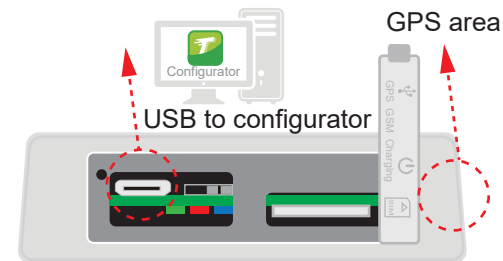

- 3** connect device to PC via USB port.
make sure the GPS area not covered by metal when installation.



Device will not accept any command after installation.



it will take 10+ seconds to turn on the LEDs after device switch on. if the log is printing on the configurator, that means device has powered on.



Device will go to beacon mode very quickly. if configurator is not printing the running log. that means device has gone to beacon mode.



minimum time interval is 10mins. device not suitable for the 'real time' application.