



Please Make sure you have download below docs before you start:

1. AT08 online document support:


🌐 <https://en.totemtek.com/support/documents/gps-tracker-at08/>
--- User manual, configurator, configuration manual.

2. AT08 online video reference:


🌐 <https://en.totemtek.com/category/blog/video/>




1 Unscrew 4 screw to open the enclosure.

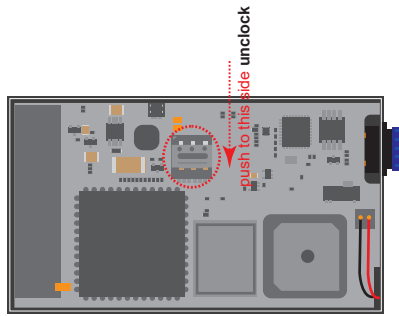


2 push the SIM slot to unlock it.
SIM Metal side face to PCB board .

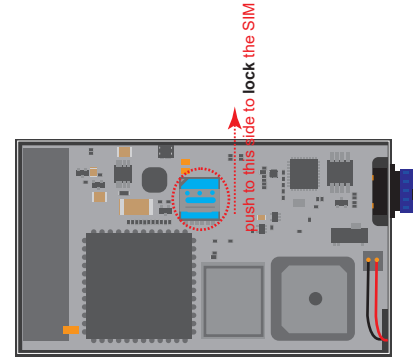


3 lock the SIM in the SIM slot.

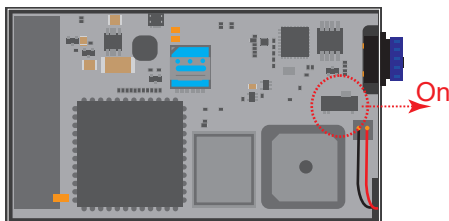

4 push the switch to right side to turn on the device.

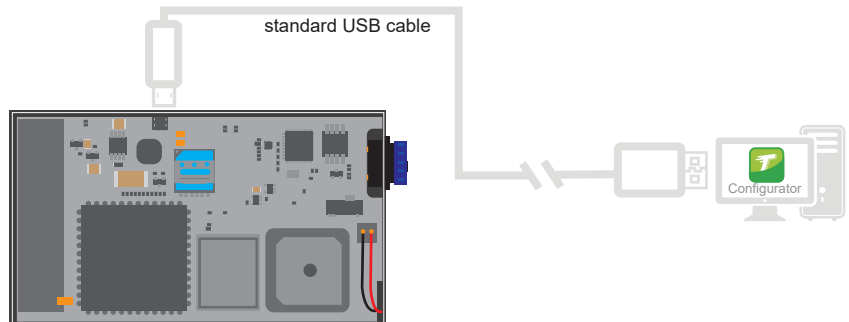

5 connect device to PC by USB cable and run configurator.

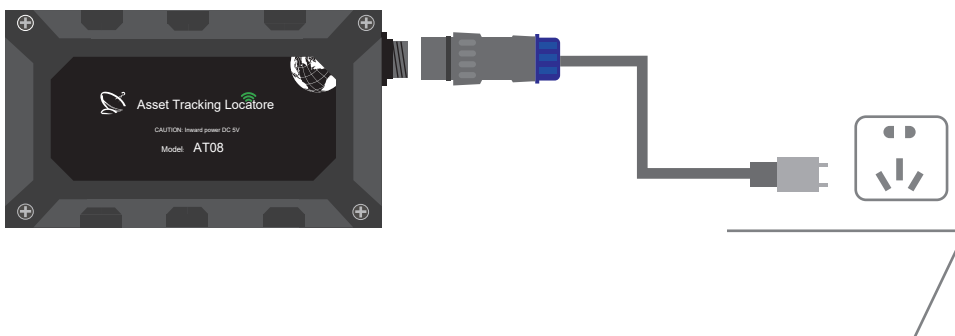

6 charge device by wall charger or cigar USB charger in the vehicle if device run out of the battery.



Make sure the GPS antenna not cover by metal.



when device connect with PC, it will charge the battery.



if device set as 'BEACON' mode, device will go to sleep quickly, USB log will not print in this case. we suggest to set the device in normal when device is connecting with PC.

