

AT09 2G/3G Quick Start Guide Ver: EN 1.0 Date: 2019-10-17


Please Make sure you have download below docs before you start:

1. AT09 online document support:




<https://en.totemtek.com/support/documents/gps-tracker-at09/>
--- User manual, configurator, configuration manual.

2. AT09 online video reference:

<https://en.totemtek.com/category/blog/video/>

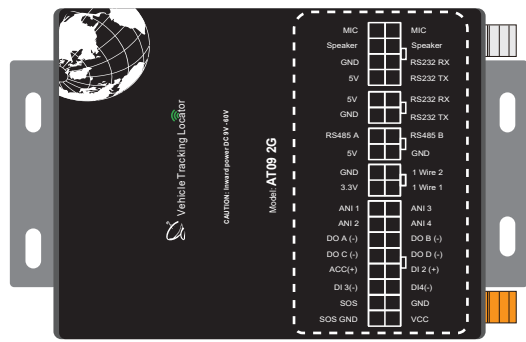

LEDs
Red: PWR
Green: GSM
Blue: GPS

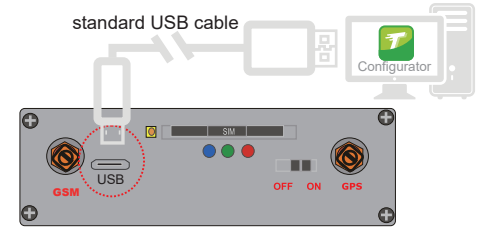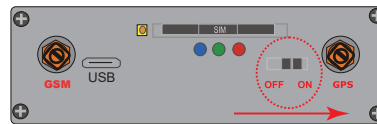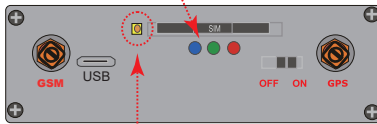


1 Use a pin to push the SIM drawer out, and put SIM inside the device.

2 Switch on the device switch to right side.

3 connect device to PC with configurator via micro USB.


4 Connect GSM and GPS antenna, put GPS antenna open to sky.

5 Connect desired IO port for data collection and finish the installation

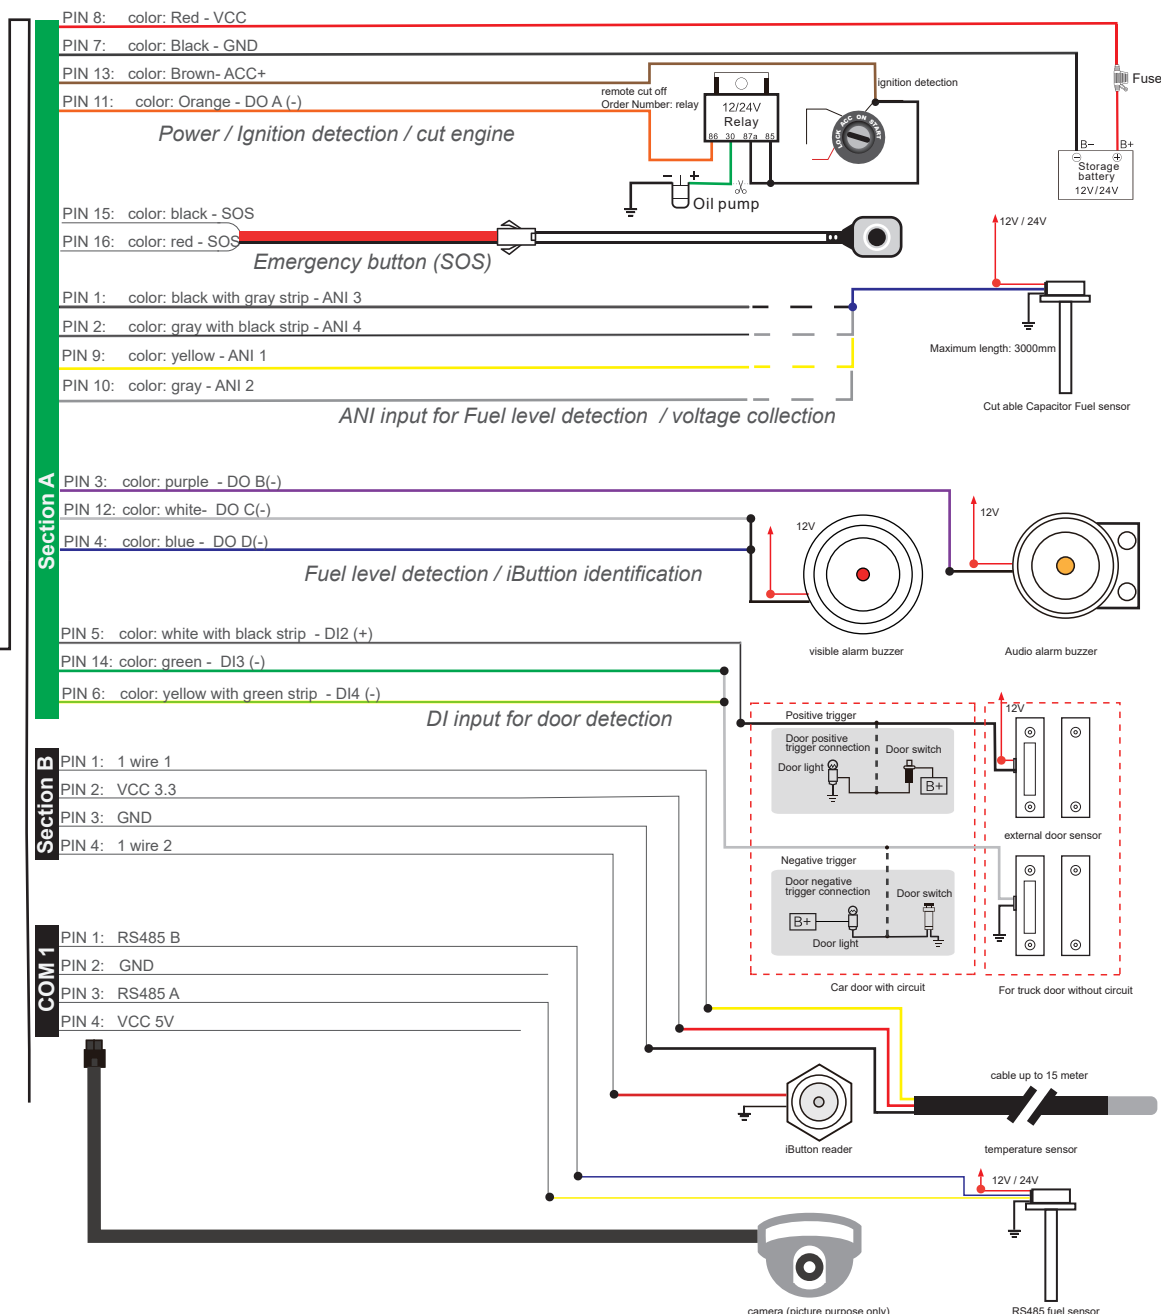

6

Connect the TPMS antenna if your device is TPMS version device.

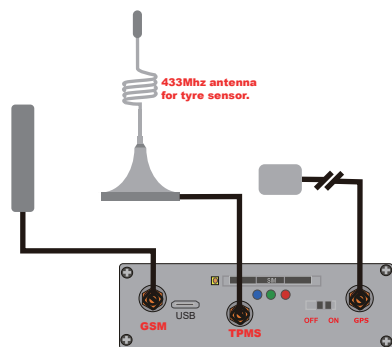

433Mhz antenna for AT09 TPMS version only.

COM 2

PIN 1: RX RS232
PIN 2: TX RS232
PIN 3: VCC 5V
PIN 4: GND

Section B

PIN 1: Speaker
PIN 5: Speaker


PIN 2: MIC
PIN 6: MIC

PIN 3: GND

PIN 4: TX RS232

PIN 7: RX RS232

PIN 8: VCC 5V

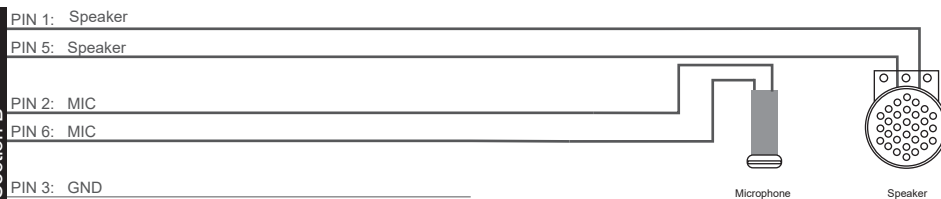

Standard package: AT09 2G/3G device, section A cable, GPS antenna, GSM antenna, TPMS antenna (TPMS version only)



all the accessories mentioned here is NOT including in the standard package.



RS232 port can connect with different accessories with variant firmware version. Accessory will come with the proper connector to plug into AT09 device.

